



RocketU 1144CM Host Controller

4-Port USB 3.0 PCI-Express 2.0 x4 RAID HBA for Mac

User's Guide

Revision: 1.0

Dec. 13, 2012

HighPoint Technologies, Inc.

Copyright

Copyright © 2013 HighPoint Technologies, Inc. This document contains materials protected by International Copyright Laws. All rights reserved. No part of this manual may be reproduced, transmitted or transcribed in any form and for any purpose without the express written permission of HighPoint Technologies, Inc.

Trademarks

Companies and products mentioned in this manual are for identification purpose only. Product names or brand names appearing in this manual may or may not be registered trademarks or copyrights of their respective owners. Backup your important data before using HighPoint's products and use at your own risk. In no event shall HighPoint be liable for any loss of profits, or for direct, indirect, special, incidental or consequential damages arising from any defect or error in HighPoint's products or manuals. Information in this manual is subject to change without notice and does not represent a commitment on the part of HighPoint.

Notice

Reasonable effort has been made to ensure that the information in this manual is accurate. HighPoint assumes no liability for technical inaccuracies, typographical, or other errors contained herein.

Table of Contents

1 Features and Specifications	4
2 Physical Specifications.....	5
3 Kit Contents	6
4 Hardware Description and Installation.....	7
4.1 RocketU 1144CM Host Adapter Board Layout	7
4.2 Installing the RocketU 1144CM Host Adapter.....	7
5 RocketU 1144CM Host Adapter Driver Installation.....	8
5.1 Driver Installation.....	8
5.2 Verify Installation of the Software.....	11
6 Connect Hard Disk to RocketU 1144CM Host Adapter.....	12
7 Web RAID Management Interface.....	13
7.1 Running the Web RAID Management Software	13
7.2 Web RAID Management – Manage.....	14
7.2.1 Manage - Devices	15
7.2.2 Manage - Array	15
7.2.3 Manage – Spare Pool	18
7.3 Web RAID Management – Event.....	20
7.4 Web RAID Management – Task.....	21
7.5 Web RAID Management – Setting	22
7.6 Maintaining and Rebuilding a RAID Array.....	24
7.6.1 Maintenance and Verify	24
7.6.2 Maintenance and Rebuilding a Critical RAID Array	25
7.6.3 Add Disk	25
7.6.4 Rebuild RAID Array	26
7.7 Web GUI Icon Definition List.....	26
8 Thank You	28
9 Customer Support	29

HighPoint RocketU 1144CM

Quad 5Gb/s Ports USB 3.0 - SuperSpeed RAID HBA

HighPoint's RocketU 1144CM: 3rd Generation PCI-E 2.0 x4 USB 3.0 HBA designed for Apple Mac Pro's and Mac OS X.

RocketU 1144CM HBAs benefit from a 2 ounce (oz) copper PCB layer for robust transfer performance and improved energy efficiency. The four Dedicated 5Gb/s USB Ports deliver 20Gb/s of transfer bandwidth.

The RocketU 1144CM is optimized for today's fastest USB 3.0 HDD and SSD's, storage docks, and enclosures.

Built-in RAID technology and an intuitive Web-based Management interface support a variety of storage configurations including RAID 0, 1, and JBOD.

1 Features and Specifications

Host Adapter Architecture

- PCI Express 2.0 x4
- Quad-Port: Four USB 3.0 ports with type A connectors for easy data access
- SuperSpeed USB 3.0: 5Gb/s per USB port
- 20Gb/s transfer bandwidth
- Support RAID 0, 1 and JBOD
- Optimized for external USB drives and drive enclosures
- Backwards compatible with USB 2.0 & 1.1
- Hot-Swap and Hot-Plug
- Compliant with xHCI (Extensible Host Controller Interface) Specification
- Support SMTP Email notification
- Mac OS X 10.6 and newer

2 Physical Specifications

Host Adapter Dimensions:

Size: 96mm x 95.0mm x 19mm

EMI:

EMI: FCC Part 15 Class B and CE

Thermal and Atmospheric Characteristics:

Work Temperature Range: +5 °C ~+ 55 °C

Relative Humidity Range: 5% ~ 60% non-condensing

Storage Temperature: -20 °C ~ +80 °C

MTBF: 920,585 Hours

Electrical Characteristics:


PCI-E	3.3V	12V
Power	4W max	1W max

3 Kit Contents

- RocketU 1144CM USB 3.0 HBA
- CD (Driver Software)
- Quick Installation Guide

4 Hardware Description and Installation

4.1 RocketU 1144CM Host Adapter Board Layout

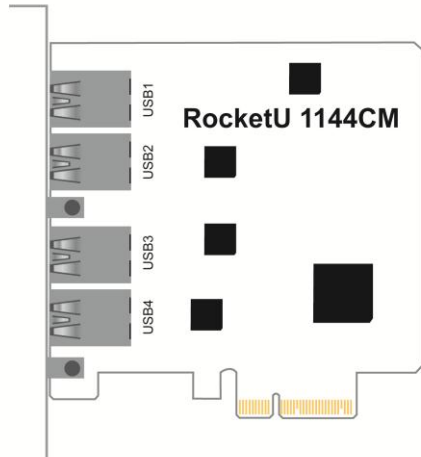


RocketU 1144CM

4.2 Installing the RocketU 1144CM Host Adapter

Note: Make sure the system is powered-off before installing the RocketU host adapter.

1. Open the system chassis.
2. Locate an unused PCI-Express $\times 16$ slot.
3. Remove the PCI-Express slot cover.
4. Gently insert the RU series into the PCI-Express slot, and secure the bracket to the system chassis.
5. After installing the adapter, attach the hard disks or disk enclosure to the RU series card using the USB cables.
6. Close and secure the system chassis.

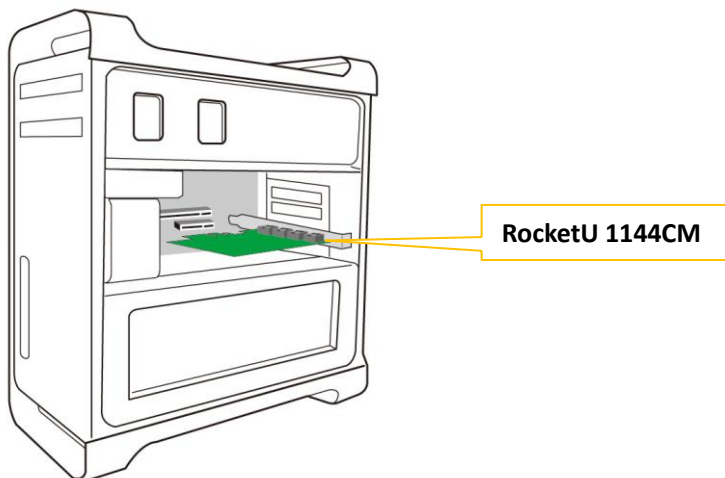


5 RocketU 1144CM Host Adapter Driver Installation


5.1 Driver Installation


Once you have installed the RocketU 1144CM Card and booted your Mac, follow these instructions to install the drivers and the HighPoint Web Management Software:


1. Click “System Information” icon.
2. Click “PCI Cards”. Four PCI entries labeled “pci1103,1042” will be displayed. “Driver Installed” should be reported as “No” for these entries.

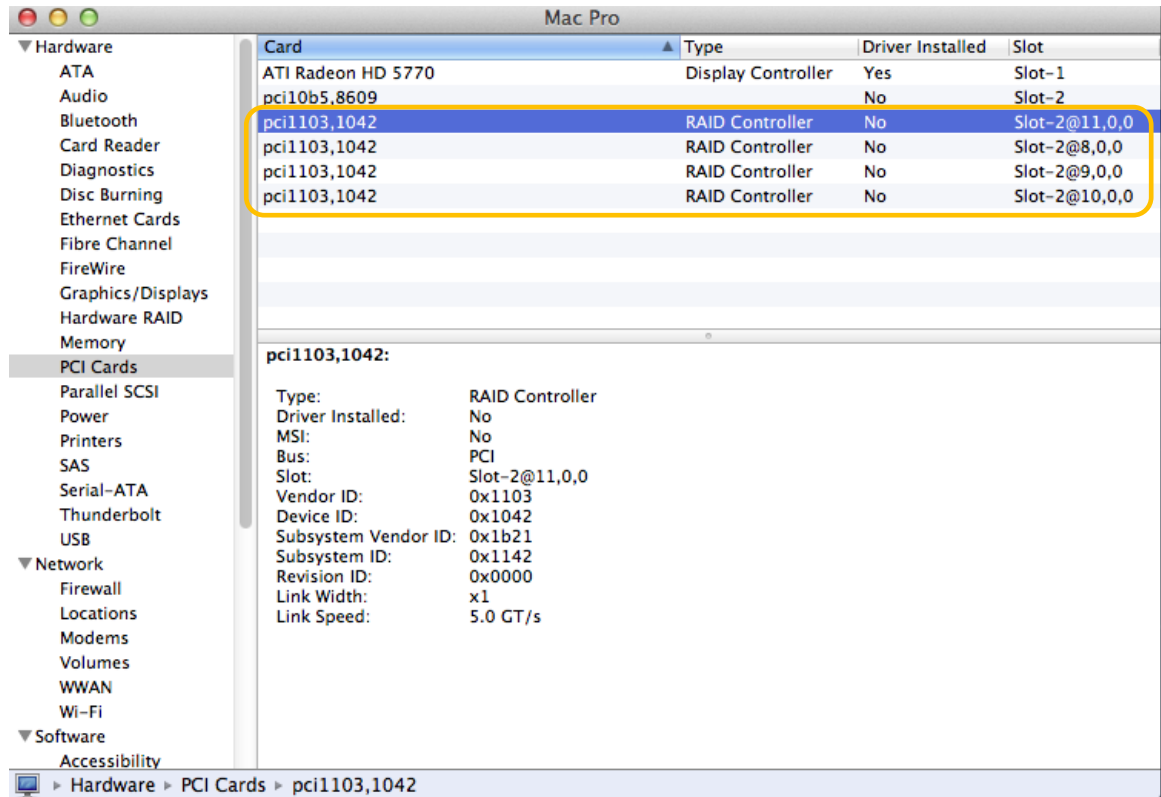


3. Insert the RocketU Series Software CD into your Mac Pro's DVD drive and navigate to the Mac Software package folder:
/RocketU/RU1144CM
Double-click on the "*.dmg" file to mount the disc image containing the Mac OS X software and drivers.

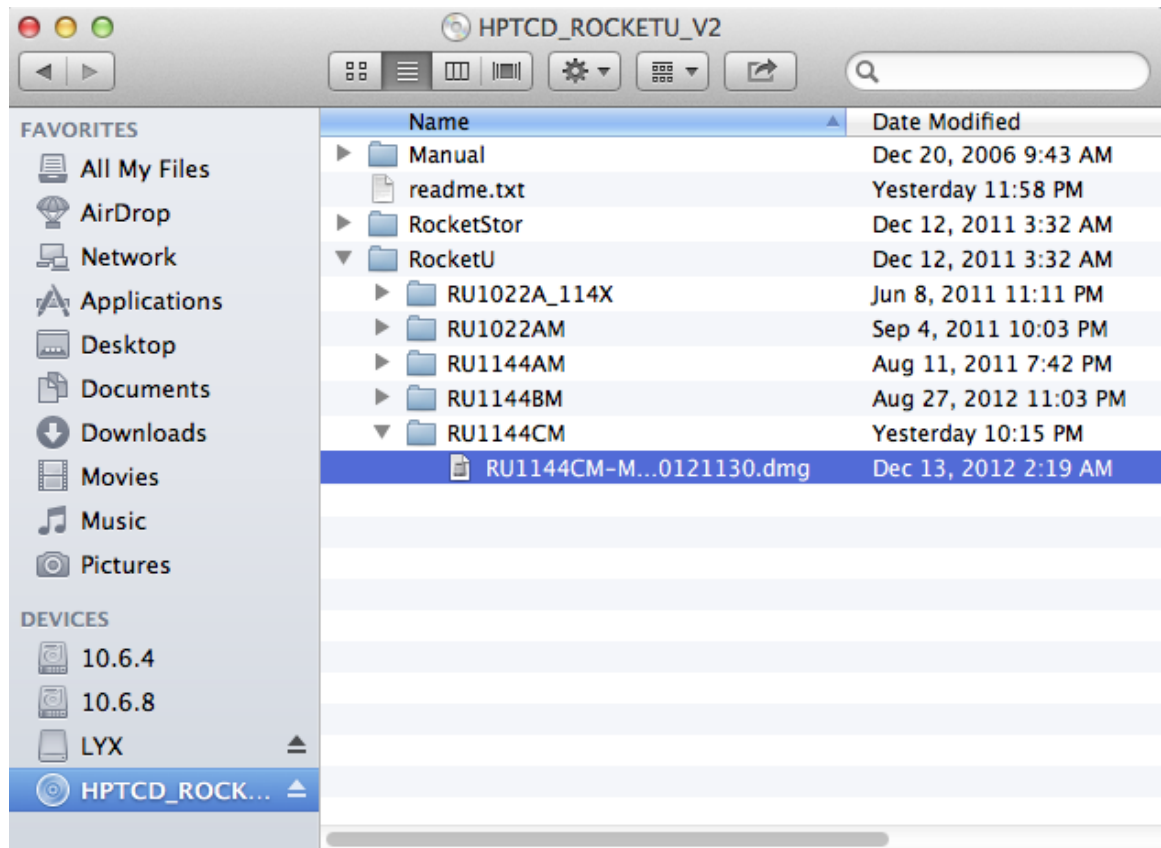


4. Double-click on the installer package labeled  to start the installation process.

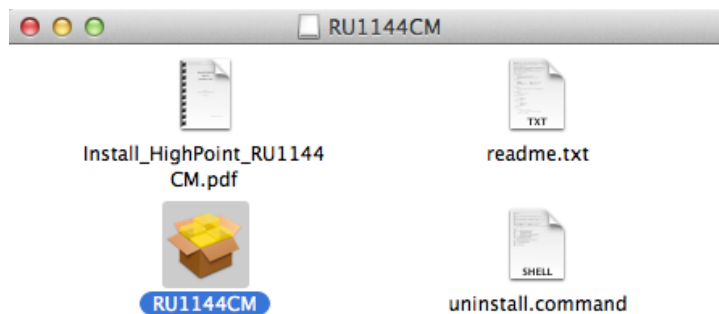

5. Follow the on-screen steps to complete the installation process.

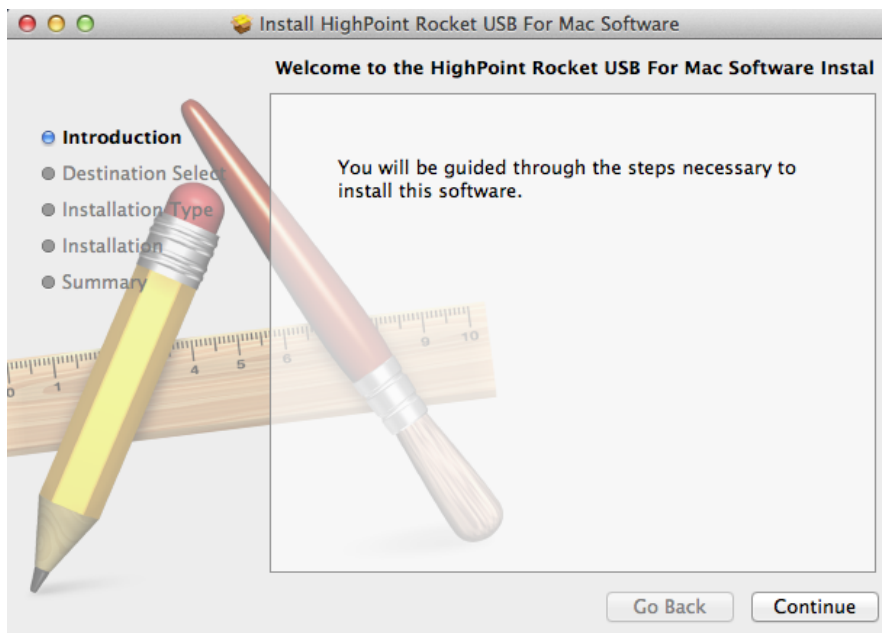


6. After the install has completed, you will be prompted to restart your computer. You will need to restart in order to use the RocketU 1144CM.

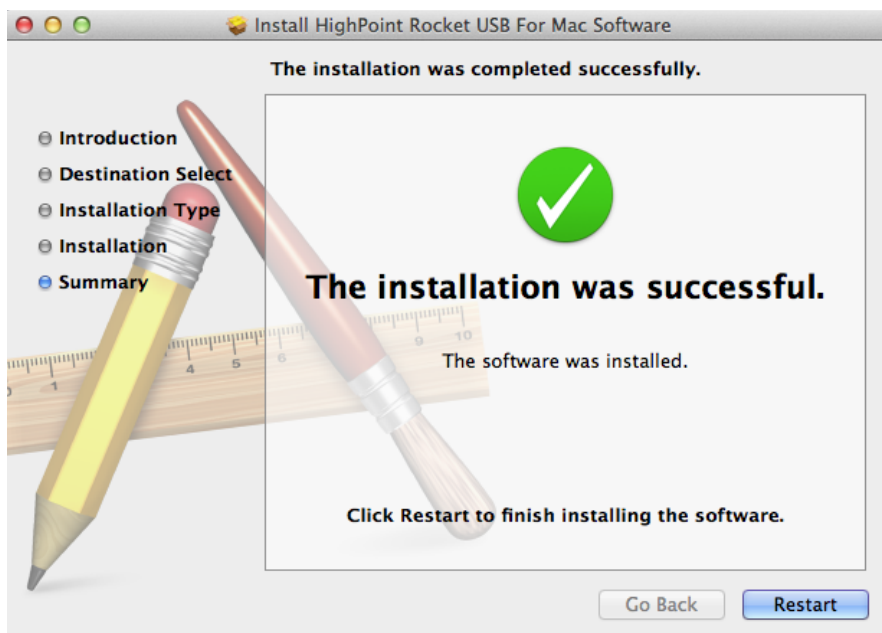

5.2 Verify Installation of the Software

1. Click “System Information” icon.
2. Click “PCI Cards”. Four PCI entries labeled “pci1103,1042” will be displayed. “Driver Installed” should be reported as “Yes” for these entries.

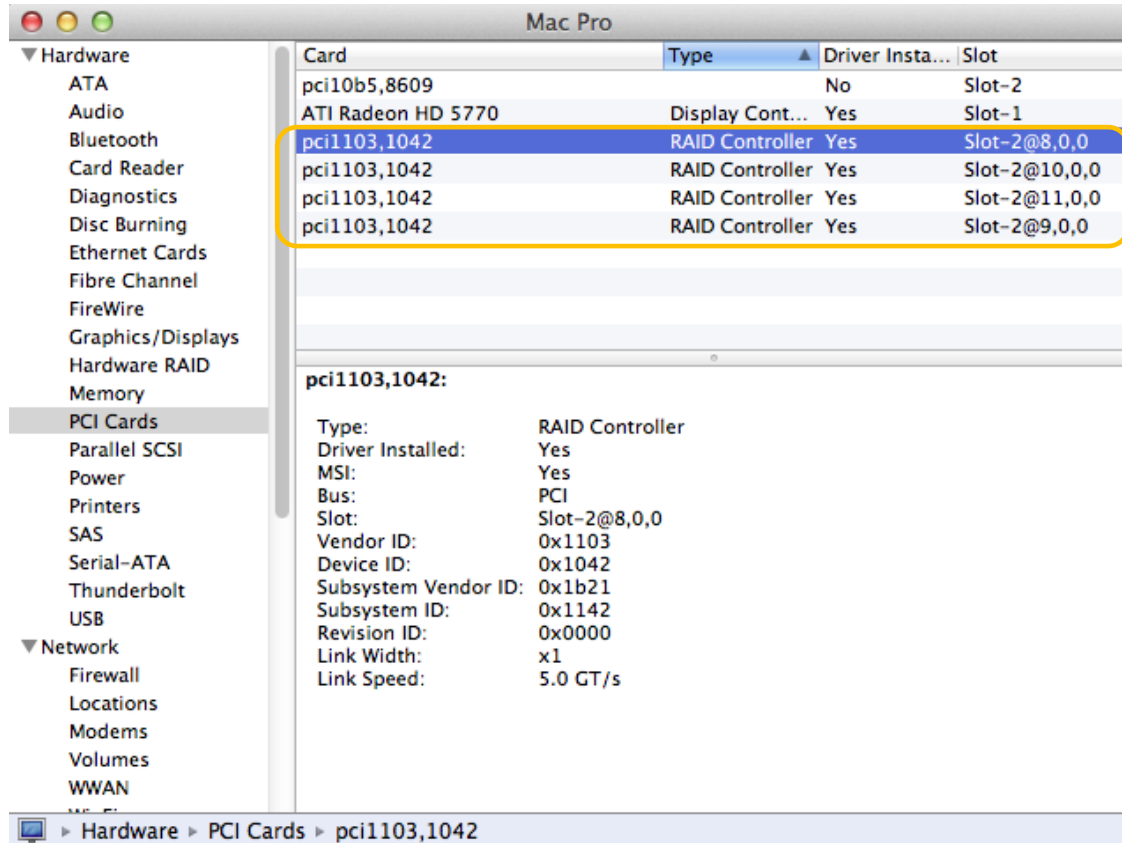


6 Connect Hard Disk to RocketU 1144CM Host Adapter

The RocketU 1144CM's standard Type-A ports accept stand-alone USB 3.0 hard drive and SSD's kits, as well as standard USB 3.0 enclosures and docking bays.

HighPoint RocketStor 5122B USB 3.0 Storage docks are an ideal companion for the RocketU 1144CM HBA. The innovative dual-5Gb/s bay architecture provides an unprecedented level of transfer bandwidth for a USB-based storage solution, delivering the fastest SATA 6G performance possible through USB 3.0 connectivity.

1. Make sure the RocketU 1144CM has been installed into your Mac.
2. Connect the enclosure or hard disk to the RocketU 1144CM with USB 3.0 cables.
3. Allow the drives/enclosure to spin up for a few moments. Once the devices are ready, they will be recognized by the operating system and can be accessed as needed

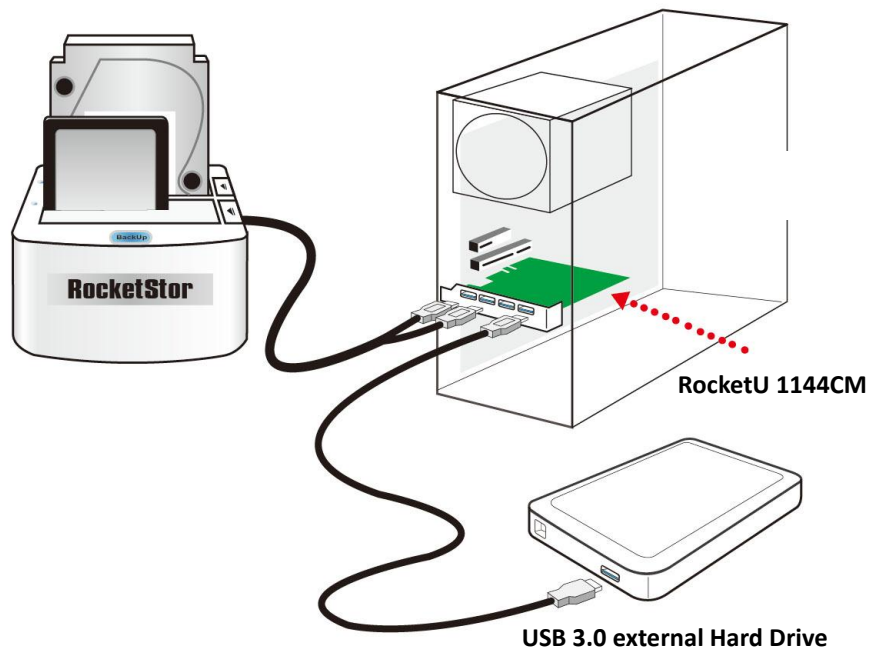

7 Web RAID Management Interface

HighPoint's web-based RAID Management Software (also known simply as the "Web GUI"), is used to monitor and configure hard disks and RAID arrays attached to HighPoint Rocket host adapters.

The software package must be installed on a system with supported HighPoint Rocket controllers installed, and the device driver must be loaded to run the service. A web browser with XML support is required on the client side, e.g. Safari, Mozilla or Google's Chrome.

7.1 Running the Web RAID Management Software

To run the Web GUI, start your browser and enter the following URL address or click on the shortcut icon on the desktop:

http://localhost:7402

Controller 1 (RU1144CM)							
	Device_1_3_1	Model	ASMT 2105-00000000000000000000		Capacity	60 GB	
	Unplug	Revision	0		Serial Number	000000000000000000000000	
		Status	Normal		Port	1/3/1	
	Device_1_4_1	Model	ASMT 2105-123456789012		Capacity	60 GB	
	Unplug	Revision	0		Serial Number	123456789012	
		Status	Normal		Port	1/4/1	

HighPoint Browser Based RAID Management For Mac 1.0.1
Copyright (c) 1996-2012 HighPoint Technologies, Inc. All Rights Reserved

The RAID Management Interface will display information about any hard disks and SSD's attached to the RocketU 1144CM HBA.

7.2 Web RAID Management – Manage

Three options are provided by the Manage Tab: Device, Array and Spare Pool.

HighPoint Browser Based RAID Management for Mac -- Array Management

http://localhost:7402/arrman.cgi?userid=administrator




Google

ple Yahoo! Google Maps YouTube Wikipedia News (25) Popular

Manage Event Task Setting





HighPoint Technologies, Inc.

Logical Device Information

Name	Type	Capacity	OS Name	Status
 Device_1_1_1	Hard Disk	500 GB	HPT DISK 4_0	Normal
 Device_1_2_1	Hard Disk	3.00 TB	HPT DISK 4_1	Normal
 Device_1_3_1	Hard Disk	1.50 TB	HPT DISK 4_2	Normal

Create Array

External Drive Information

Port	Model	Capacity
 1/1/1	HPT RS5122B-5122B000007F	500 GB
 1/2/1	HPT RS5122B-5122B0000080	3.00 TB
 1/3/1	HPT RS5122B-5122B0000001	1.50 TB
 1/4/1	HPT RS5122B-5122B0000002	500 GB

Rescan

HighPoint Browser Based RAID Management For Mac v1.0.0
Copyright (c) 1996-2011 HighPoint Technologies, Inc. All Rights Reserved

Device: Displays all hard drives and SSD's attached to the RocketU 1144CM HBA.

Array: Create and Delete RAID arrays.

Spare Pool: When creating RAID 1 arrays, a Spare HDD can be configured to automatically help rebuild the array in the case of disk failure.

7.2.1 Manage - Devices

Manage – Device displays information about each hard disk and SSD hosted by the RocketU 1144CM HBA, including the device’s Model Number, Serial Number, Firmware version, Total Capacity, and port number (which port the device is attached to).

HighPoint Browser Based RAID Management for Mac -- Device Management

localhost:7402/devman.cgi?userid=administrator

Manage Event Task Setting

Device Array Spare Pool

Co Controller 1 (RU1144CM)

Device	Model	Capacity	Revision	Status	Serial Number	Port
Device_1_1_1	HPT RS5122B-5122B00000FA	127 GB	0	Normal	5122B00000FA	1/1/1
Device_1_2_1	HPT RS5122B-5122B00000F9	249 GB	0	Normal	5122B00000F9	1/2/1

HighPoint Browser Based RAID Management For Mac v1.0.0

Copyright (c) 1996-2011 HighPoint Technologies, Inc. All Rights Reserved

7.2.2 Manage - Array

Create Array


The RocketU 1144CM allows you to configure RAID arrays using SATA HDD and SSD’s attached to any of its four USB 3.0 ports. Three types of RAID configurations (known as RAID levels) are supported:

Note: The requirements for creating a RAID array are below.

JBOD: Also known as “Just a Bunch Of Disks”. Requires one or more devices. Select this array type if maximum storage capacity is priority. The capacity of a JBOD array is the sum total of each devices’ available capacity.

RAID 0: Also known as a “Stripe array”. Requires one or more devices. Configure a RAID 0 array if speed is priority – it is the fastest RAID level. The capacity of a RAID 0 array is equal to the smallest device multiplied by the total number of devices (for example: a 2 disk RAID 0 array created between a 3TB and 4TB hard drive results in 6TB of available capacity).

RAID 1: Also known as “Mirroring”. Requires 2 devices. Select this RAID level if security is priority. The target device’s capacity must be equal to or larger than the source. All data written to the source is automatically duplicated to the target.



Manage Event Task Setting

Create Array

Array Type: JBOD(Volume)
RAID 0
✓ RAID 1
RAID 1/0

Array Name:

Initialization Method: Foreground ▾

Select All

Available Drives:

	Port	Model	Capacity	Status
<input type="checkbox"/>	1/1/1	RocketStor Device	59 GB	Normal
<input type="checkbox"/>	1/2/1	RocketStor Device	59 GB	Normal
<input type="checkbox"/>	1/4/1	RocketStor Device	59 GB	Normal

Create

HighPoint Browser Based RAID Management For Mac 1.0.1

Copyright (c) 1996-2012 HighPoint Technologies, Inc. All Rights Reserved


Array Type: The RocketU 1144CM supports RAID 0, 1, and JBOD configurations.

Array Name: Name the array – this step is optional.

HighPoint Browser Based RAID Management for Mac -- Create Array

http://localhost:7402/arrman.cgi?func=ShowCreate&userid=administrator

ple Yahoo! Google Maps YouTube Wikipedia News (25) Popular ▾



Manage Event Task Setting

Create Array

Array Type: RAID 0 ▾

Array Name: RAID 0

Initialization Method: Quick Init ▾

Select All

Available Drives:

	Port	Model	Capacity	Status
<input type="checkbox"/>	1/1/1	HPT RS5122B-5122B000007F	500 GB	Normal
<input type="checkbox"/>	1/2/1	HPT RS5122B-5122B0000080	3.00 TB	Normal
<input type="checkbox"/>	1/4/1	HPT RS5122B-5122B0000002	3.00 TB	Normal

Create

HighPoint Browser Based RAID Management For Mac v1.0.0

Copyright (c) 1996-2011 HighPoint Technologies, Inc. All Rights Reserved

Initialization Method: RAID initialization is available for RAID level 1 RAID arrays. RAID initialization will zero out each device, ensuring a healthy RAID array. There are two initialization

methods to choose from: Foreground and Quick Init.

- Quick Init: Will skip the initialization process and allow the user to immediately format and use the RAID array. This method is recommended only if you plan on "Verifying" the RAID array at a later time. A RAID array that is not fully initialized may have problems rebuilding when a RAID array becomes critical.

Note:

A. This option will delete all content on the disks.

B. This option will not perform disk array initialization. When new HDD's are used this option can be ignored since there is no data on the hard disks.

- Foreground: Will zero out the RAID array. The RAID array will not be accessible during the initialization process and it will only be available after initialization is complete. Initialization times are dependent the capacity of the RAID array. (A larger array will take longer to initialize than a smaller array).

Note:

A. This option will delete all content on the disks.

B. The initialization time will be shorter time compared to the "Background" option. The logical disks will not be reported to the OS until the initialization is complete.

HighPoint Browser Based RAID Management for Mac -- Create Array

http://localhost:7402/arrman.cgi?func=ShowCreate&userid=administrator

Manage Event Task Setting

HighPoint Technologies, Inc.

Create Array

Array Type: RAID 1

Array Name: RAID 0

Initialization Method: ☒ Foreground ☐ Quick Init

Select All

	Port	Model	Capacity	Status
Available Drives:	<input type="checkbox"/> 1/1/1	HPT RS5122B-5122B000007F	500 GB	Normal
	<input type="checkbox"/> 1/2/1	HPT RS5122B-5122B0000080	3.00 TB	Normal
	<input type="checkbox"/> 1/4/1	HPT RS5122B-5122B0000002	3.00 TB	Normal

Create

HighPoint Browser Based RAID Management For Mac v1.0.0

Copyright (c) 1996-2011 HighPoint Technologies, Inc. All Rights Reserved

Select All: Select the number of HDD for the RAID array.

HighPoint Browser Based RAID Management for Mac -- Create Array

localhost:7402/arrman.cgi?func=ShowCreate&userid=administrator

Manage Event Task Setting

Create Array

Array Type: RAID 0

Array Name: HPT

Initialization Method: Quick Init

Available Drives:

	Port	Model	Capacity	Status
<input checked="" type="checkbox"/>	1/1/1	HPT RS5122B-5122B00000FA	127 GB	Normal
<input checked="" type="checkbox"/>	1/2/1	HPT RS5122B-5122B00000F9	249 GB	Normal

Create

HighPoint Browser Based RAID Management For Mac v1.0.0

7.2.3 Manage – Spare Pool

When creating redundant RAID arrays 1 a Spare HDD can be configured to automatically help rebuild a degraded redundant RAID.

1. You will see the following window after clicking the Spare Pool option.

HighPoint Browser Based RAID Management for Mac -- Spare Pool Management

http://localhost:7402/spareman.cgi?userid=administrator

Manage Event Task Setting

Spare Pool

No spare drive

Available Drives



	Device	Model	Capacity
<input type="checkbox"/>	Device_1_1_1	HPT RS5122B-5122B00000A3	60 GB
<input type="checkbox"/>	Device_1_2_1	HPT RS5122B-5122B00000A4	60 GB

Add Spare



HighPoint Browser Based RAID Management For Mac v1.0.0

Copyright (c) 1996-2011 HighPoint Technologies, Inc. All Rights Reserved

2. Check the box before each disk you want to assign to the Spare pool, and click “Add Disk”. This will open a pop-up window. Click “OK” to confirm.

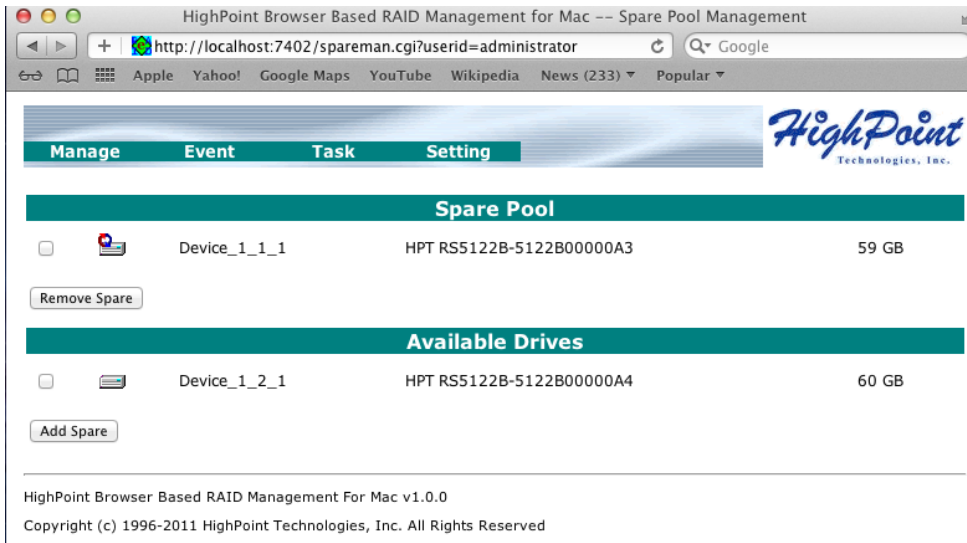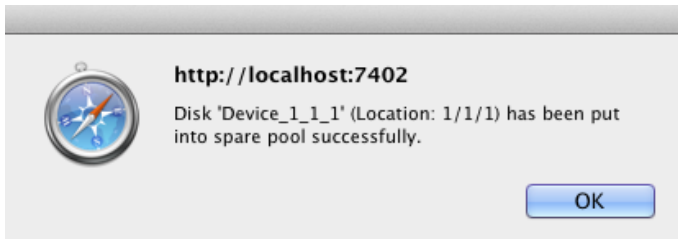

3. To remove a disk from the Spare Pool, check the box before the target disk and click “Remove Spare”. Click “OK” to continue, or “Cancel” to return to the menu. If you select “OK”, a second pop-up window will open announcing that the disk has been removed from the Spare Pool. Click “OK” to confirm.

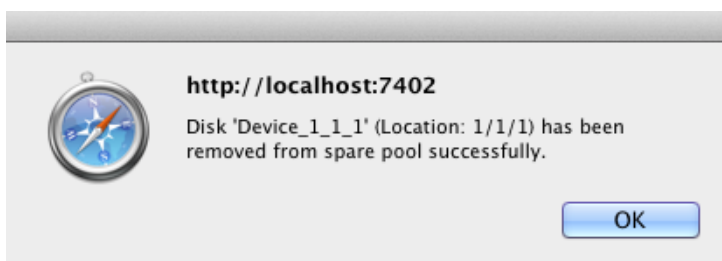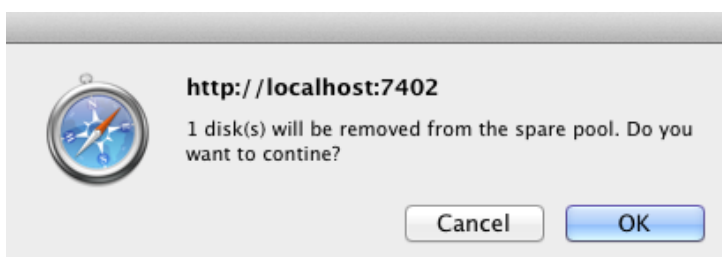

7.3 Web RAID Management – Event

The Event tab will open the Event View interface.

Event View logs all RAID related activity including administrative actions, warnings and hardware failures.

















Clear: Click “Clear” to remove all current entries from the Event View log.

ManageEventTaskSetting

HighPoint
Technologies, Inc.

Clear

Event View (1)

Date Time	Description
 2012/12/16 23:31:56	Plugging device detected.('ASMT 2105-123456789012' at Controller1-Channel4-Device1)
 2012/12/16 23:31:52	Plugging device detected.('ASMT 2105-00000000000000000000' at Controller1-Channel3-Device1)
 2012/12/16 23:31:20	Plugging device detected.('HPT RS5122B-5122B00000A4' at Controller1-Channel1-Device1)
 2012/12/16 23:31:4	Disk 'HPT RS5122B-5122B00000A4' at Controller1-Channel1-Device1 failed.
 2012/12/16 23:26:45	Array 'RAID_0_0' has been deleted successfully.
 2012/12/16 23:26:19	RAID 0 Array 'RAID_0_0' has been created successfully (Disk 1:HPT RS5122B-5122B00000A4, 1/1/1; Disk 2:HPT RS5122B-5122B00000A3, 1/2/1; Disk 3:ASMT 2105-00000000000000000000, 1/3/1; Disk 4:ASMT 2105-123456789012, 1/4/1).
 2012/12/16 23:26:19	Device 'Device_1_4_1' (1/4/1) has been initialized.
 2012/12/16 23:26:19	Device 'Device_1_3_1' (1/3/1) has been initialized.
 2012/12/16 23:26:19	Device 'Device_1_2_1' (1/2/1) has been initialized.
 2012/12/16 23:26:18	Device 'Device_1_1_1' (1/1/1) has been initialized.
 2012/12/16 21:20:22	Plugging device detected.('ASMT 2105-00000000000000000000' at Controller1-Channel1-Device1)
 2012/12/16 21:19:44	Disk failed.
 2012/12/16 21:17:21	Disk 'HPT RS5122R-5122A0000010' at Controller1-Channel4-Device1 failed.
 2012/12/16 21:16:45	Plugging device detected.('HPT RS5122R-5122A0000010' at Controller1-Channel4-Device1)
 2012/12/16 21:16:37	Disk 'ASMT 2105-123456789012' at Controller1-Channel2-Device1 failed.
 2012/12/16 21:16:13	Disk failed.

HighPoint Browser Based RAID Management For Mac 1.0.1
Copyright (c) 1996-2012 HighPoint Technologies, Inc. All Rights Reserved

7.4 Web RAID Management – Task

The Task page allows you to schedule maintenance sessions for RAID 1 arrays.

Regular maintenance is highly recommended for any redundant RAID array, and is essential for maintaining healthy, reliable storage configurations.

The interface allows you to name each task, and specify the frequency, date, hour minute and second for each session.

HighPoint Browser Based RAID Management for Mac -- Task Management

http://localhost:7402/task.cgi?userid=administrator

Manage Event Task Setting

HighPoint Technologies, Inc.

Tasks List

New Verify Task

☐ RAID_1_0

Task Name:

☒ Occurs one time on 2012 - 11 - 1 at 14 : 44 : 32

Schedule: ☐ Occurs every 1 Day(s) on Sunday 1 at 14 : 44 : 32

Start date: 2012 - 11 - 1 ☐ End date: 2012 - 11 - 1

☒ No end date

Submit

HighPoint Browser Based RAID Management For Mac v1.0.0

Copyright (c) 1996-2011 HighPoint Technologies, Inc. All Rights Reserved

7.5 Web RAID Management – Setting

The Settings page provides various HBA-related settings and options.

HighPoint Browser Based RAID Management for Mac -- Setting

localhost:7402/setting.cgi?userid=administrator

Manage Event Task **Setting**

Rebuild Priority

Set Rebuild Priority: Medium Change

Browser Based RAID Management Listening Port

☒ Restrict to localhost access.

Port Number: 7402 Change

Email Notification Setting

☐ Enable Event Notification

Server Address (name or IP):

Mail From (E-mail address):

Login Name:

Password:

SMTP Port: 25 Change Setting

Recipients

E-mail	Name	Event Level
--------	------	-------------

Add Recipient

E-mail:

Name:

Event Level: ☐ Information ☐ Warning ☐ Error

Add Test

HighPoint Browser Based RAID Management For Mac v1.0.0

Copyright (c) 1996-2011 HighPoint Technologies, Inc. All Rights Reserved

Rebuild Priority: When a RAID 1 array becomes critical and needs to be rebuilt, the Rebuild Priority setting allows you to adjust how system resources are allocated to the rebuild procedure.

- **Lowest:**
Lowest Priority when rebuilding arrays. System resources will be assigned to all other tasks first.
- **Low:**
Most of the system's tasks have priority over the rebuild procedure.
- **Medium:**
Medium Priority is the default option – system resources are equally distributed between the rebuild procedure and other system tasks.
- **High:**
The majority of available system resources will be directed towards the rebuild procedure.
- **Highest:**
The HBA will utilize all available system resources to rebuild the array.


Browser Based RAID Management Listening Port: The default listening port is 7402, no other application utilities will use 7402 as listening port. Restricting to localhost access port number means that remote network access of the RAID management utility with the systems IP address will not work.

Email Notification Setting: The RocketRAID HBA can be configured to send Event Log entries to one or more E-Mail addresses.

7.6 Maintaining and Rebuilding a RAID Array

7.6.1 Maintenance and Verify

From the Manage page, click the “Maintenance” link displayed near the arrays Status to see additional options and features for the selected array. The following pop-up window will be displayed:

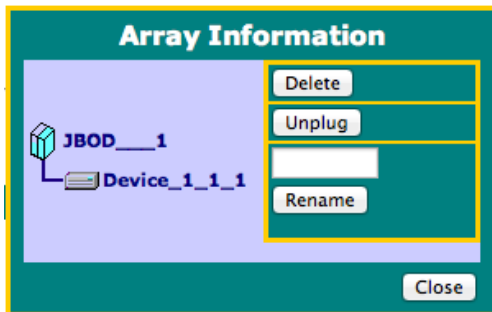

Delete: Will delete the existing RAID array or single disk JBOD. The HDD's will become legacy HDD's after rebooting.

Unplug: Power down and power off all members of the RAID array. For any hosted device not configured as an array, this option is displayed beneath the Device name (see below):

Controller 1 (RU1144BM)					
Device_1_1_1	Model	HPT RS5122B-5122B00000A3	Capacity	60 GB	
Unplug	Revision	0	Serial Number	5122B00000A3	
	Status	Normal	Port	1/1/1	
Device_1_2_1	Model	HPT RS5122B-5122B00000A4	Capacity	60 GB	
Unplug	Revision	0	Serial Number	5122B00000A4	
	Status	Normal	Port	1/2/1	

HighPoint Browser Based RAID Management For Mac v1.0.0
Copyright (c) 1996-2011 HighPoint Technologies, Inc. All Rights Reserved

Verify: Use this option to manually verify the selected RAID 1 array. This will scan the RAID disks for bad sectors, and will ensure that parity is consistent.

Rename: You are free to rename any RAID array at any time.
Note: the name is limited to 8 characters or less.

7.6.2 Maintenance and Rebuilding a Critical RAID Array

A redundant array (RAID 1) may become Critical if one of the disks fails or drops offline. The RAID status will change to Critical. Click “Maintenance” for more information. The missing /failed disk will be reported as an “Offline Disk”.

The screenshot shows the HighPoint Browser Based RAID Management for Mac interface. The top navigation bar includes links for Manage, Event, Task, and Setting. The main content area displays Logical Device Information with a table listing RAID_1_0 (RAID 1, 500 GB, HPT DISK 4_0, Critical) and Device_1_4_1 (Hard Disk). A pop-up window titled "Array Information" is overlaid, showing a diagram of the RAID_1_0 array with Device_1_1_1 and an Offline Disk. The pop-up also includes buttons for Delete, Unplug, Add Disk, and Close. Below the table, there is a "Create Array" button and a "Rescan" button. The footer contains the version information: HighPoint Browser Based RAID Management For Mac v1.0.0, Copyright (c) 1996-2011 HighPoint Technologies, Inc. All Rights Reserved.

7.6.3 Add Disk

If a spare disk is not available, you can physically install a new disk and use it to rebuild the critical array. To rebuild the array, click on “Maintenance”. Next, click “Add Disk”. The following menu will be displayed:

The screenshot shows the HighPoint Browser Based RAID Management for Mac interface, specifically the "Add Disk To Array" screen. The top navigation bar includes links for Manage, Event, Task, and Setting. The main content area displays the "Add Disk To Array" form. The "Array Name" field is set to RAID_1_0. Below the form, there is a table of available disks with columns for Port, Model, Capacity, and Status. The table lists two disks: HPT RS5122B-5122B000007F (500 GB, Normal) and HPT RS5122B-5122B0000002 (3.00 TB, Normal). A "Submit" button is located at the bottom of the form. The footer contains the version information: HighPoint Browser Based RAID Management For Mac v1.0.0, Copyright (c) 1996-2011 HighPoint Technologies, Inc. All Rights Reserved.

Check the empty circle before the new disk and click “Submit”.

7.6.4 Rebuild RAID Array

Once a disk has been added, the Web GUI will automatically start the rebuild process. Once complete, the status will change to "Normal".

HighPoint Browser Based RAID Management for Mac -- Array Management

http://localhost:7402/arrman.cgi?userid=administrator



Google

Apple Yahoo! Google Maps YouTube Wikipedia News (25) Popular

Manage Event Task Setting

HighPoint Technologies, Inc.

Logical Device Information

Name	Type	Capacity	OS Name	Status
 RAID_1_0	RAID 1	500 GB	HPT DISK 4_0	Rebuilding 0%  Maintenance

Create Array

External Drive Information









Port	Model	Capacity
1/1/1	HPT RS5122B-5122B000007F	500 GB
1/4/1	HPT RS5122B-5122B0000002	3.00 TB




 


Rescan

HighPoint Browser Based RAID Management For Mac v1.0.0
Copyright (c) 1996-2011 HighPoint Technologies, Inc. All Rights Reserved

7.7 Web GUI Icon Definition List

The definitions of each ICON used by the RAID Management interface are listed below.

Icon	Description
	The array status is "Normal".
	The array status is "Critical" - a disk is missing from the RAID array.
	The array status is "Verifying". This indicates that the array is running a data integrity check.
	The array status is "Rebuilding". This occurs when the data verification fails or when adding a new disk into the "Critical" array.
	The array status is "Critical". This indicates that current array needs "rebuild".
	The status of the "Array" or "Device" is "Disabled".
	The array is "Initializing".
	This icon means the RAID array is "Uninitialized". This icon is displayed if the Quick Init option is used when first creating an array, or if the initialization process was interrupted

	or cancelled.
	The array has stopped "Initializing". Current status is "Uninitialized".
	The device status "Legacy". An existing file system has been created on the HDD.
	The device is a "Spare". It is used to replace the failed RAID disk member to rebuild automatically
	Information.
	Warning.
	Error.

8 Thank You

Thank you for purchasing the RocketU 1144CM Host adapter. We appreciate your support, and welcome any questions, comments or product suggestions you may have.

9 Customer Support

If you encounter any problem while utilizing RocketU series Host Adapters, or have any questions about this or any other HighPoint Technologies, Inc. product, feel free to contact our Customer Support Department.

HighPoint Technologies, Inc. websites:

<http://www.highpoint-tech.com/>

Web Support:

<http://www.highpoint-tech.com/websupport/>

<http://www.highpoint-tech.com>